

NAME

acpi_ged - ACPI Generic Event Device

SYNOPSIS

To compile this driver into the kernel, place the following line in your kernel configuration file:

```
device acpi_ged
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
acpi_ged_load="YES"
```

DESCRIPTION

The **acpi_ged** driver provides support for generic events interface. This handles interrupts and evaluates the specific ACPI method. This may generate optionally ACPI notify for another device.

SEE ALSO

acpi(4)

HISTORY

The **acpi_ged** device driver first appeared in FreeBSD 14.0.

AUTHORS

The **acpi_ged** driver was written by Takanori Watanabe <takawata@FreeBSD.org>