

**NAME**

**ixgbe** - Intel(R) 10Gb Ethernet driver for the FreeBSD operating system

**SYNOPSIS**

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device iflib  
device ixgbe
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
if_ixgbe_load="YES"
```

**DESCRIPTION**

The **ixgbe** driver provides support for PCI 10Gb Ethernet adapters based on the Intel 82598EB Intel(R) Network Connections. The driver supports Jumbo Frames, MSIX, TSO, and RSS.

For questions related to hardware requirements, refer to the documentation supplied with your Intel 10GbE adapter. All hardware requirements listed apply to use with FreeBSD.

Support for Jumbo Frames is provided via the interface MTU setting. Selecting an MTU larger than 1500 bytes with the ifconfig(8) utility configures the adapter to receive and transmit Jumbo Frames. The maximum MTU size for Jumbo Frames is 9710.

This driver version supports VLANs. For information on enabling VLANs, see ifconfig(8).

**HARDWARE**

The **ixgbe** driver supports the following cards:

- ◆ Intel(R) 10 Gigabit XF SR/AF Dual Port Server Adapter
- ◆ Intel(R) 10 Gigabit XF SR/LR Server Adapter
- ◆ Intel(R) 82598EB 10 Gigabit AF Network Connection
- ◆ Intel(R) 82598EB 10 Gigabit AT CX4 Network Connection

**DIAGNOSTICS**

**ixgbe%d: Unable to allocate bus resource: memory** A fatal initialization error has occurred.

**ixgbe%d: Unable to allocate bus resource: interrupt** A fatal initialization error has occurred.

**ixgbe%d: watchdog timeout -- resetting** The device has stopped responding to the network, or there is a

problem with the network connection (cable).

## SUPPORT

For general information and support, go to the Intel support website at: <http://support.intel.com>.

If an issue is identified with the released source code on the supported kernel with a supported adapter, email the specific information related to the issue to [<frebsd@intel.com>](mailto:frebsd@intel.com).

## SEE ALSO

[altq\(4\)](#), [arp\(4\)](#), [iflib\(4\)](#), [netintro\(4\)](#), [ng\\_ether\(4\)](#), [polling\(4\)](#), [vlan\(4\)](#), [ifconfig\(8\)](#)

## HISTORY

The **ixgbe** device driver first appeared in FreeBSD 7.0.

## AUTHORS

The **ixgbe** driver was written by Intel Corporation [<frebsd@intel.com>](mailto:frebsd@intel.com).