

NAME

powermac_nvram - non-volatile RAM

SYNOPSIS

To compile this driver into the kernel, place the following line in your kernel configuration file:

```
device powermac_nvram
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
powermac_nvram_load="YES"
```

DESCRIPTION

The **powermac_nvram** driver provides access to the Open Firmware configuration NVRAM available on the Apple PowerPC-based machines.

This driver currently supports "Core99" machines containing a Sharp, Micron, or AMD NVRAM.

SEE ALSO

`nvrnm(8)`

HISTORY

The **powermac_nvram** driver first appeared in FreeBSD 7.0.

AUTHORS

The **powermac_nvram** driver was written by Maxim Sobolev <sobomax@FreeBSD.org>.