

**NAME**

**snd\_envy24** - VIA Envy24 and compatible bridge device driver

**SYNOPSIS**

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device sound
device snd_envy24
device snd_spicds
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
snd_envy24_load="YES"
```

**DESCRIPTION**

The **snd\_envy24** bridge driver allows the generic audio driver `sound(4)` to attach to VIA Envy24 (ICE1724 or VT1724 chipset) and compatible audio devices.

**HARDWARE**

The **snd\_envy24** driver supports the following audio devices:

- M-Audio Audiophile 2496
- M-Audio Delta Dio 2496
- Terratec DMX 6fire

Only analog playback is supported. Recording and other features of these cards are not supported.

**SEE ALSO**

`sound(4)`

**HISTORY**

The **snd\_envy24** device driver first appeared in FreeBSD 6.3.

**AUTHORS**

The **snd\_envy24** driver was written by Katsurajima Naoto. This manual page was written by Alexander Leidinger <[netchild@FreeBSD.org](mailto:netchild@FreeBSD.org)>.