

NAME

ugold - TEMPer gold HID thermometer

SYNOPSIS

To compile this driver into the kernel, place the following lines into your kernel configuration file:

```
device usb  
device hid  
device ugold
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
ugold_load="YES"
```

DESCRIPTION

The **ugold** driver provides support for pcsensors TEMPer gold devices.

The driver possesses a collection of sensor values which are made available through the sysctl(8) interface.

HARDWARE

The following devices are supported by the **ugold** driver:

- ◆ RDing TEMPer1V1.2

SEE ALSO

usb(4), sysctl(8)