

**NAME**

**umoscom** - USB support for serial adapters based on chips made by MOSCHIP

**SYNOPSIS**

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device usb  
device ucom  
device umoscom
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
umoscom_load="YES"
```

**DESCRIPTION**

The **umoscom** driver provides support for various serial adapters based on chips from MOSCHIP.

The device is accessed through the ucom(4) driver which makes it behave like a tty(4).

**FILES**

```
/dev/ttyU*    for callin ports  
/dev/ttyU*.init  
/dev/ttyU*.lock  
                corresponding callin initial-state and lock-state devices
```

```
/dev/cuaU*   for callout ports  
/dev/cuaU*.init  
/dev/cuaU*.lock  
                corresponding callout initial-state and lock-state devices
```

**SEE ALSO**

tty(4), ucom(4), usb(4)

**HISTORY**

The **umoscom** driver appeared in OpenBSD and was ported to FreeBSD.